

SMART
COMFORT

ORBIT

MASSAGE CHAIR



USER GUIDE
OPERATING INSTRUCTIONS



ORBIT

MASSAGE CHAIR




Use this guide to get the most out of your Orbit Massage Chair.
It is recommended to read through this guide before using the chair.

TABLE OF CONTENTS

INSTALLATION & SETUP	6
QUICK START GUIDE.....	12
BASIC CONTROLS	14
AUTOMATIC MODES	16
SHOULDER ADJUSTMENT	18
CHAIR POSITION CONTROLS	19
AUXILIARY FUNCTIONS	20
MANUAL MODE.....	24
BLUETOOTH AUDIO	32
ARMREST CONTROL PANEL.....	33
SETTINGS MENU	34
VOICE CONTROL.....	35
BASIC TROUBLESHOOTING	37

MASSAGE CHAIR COMPONENTS

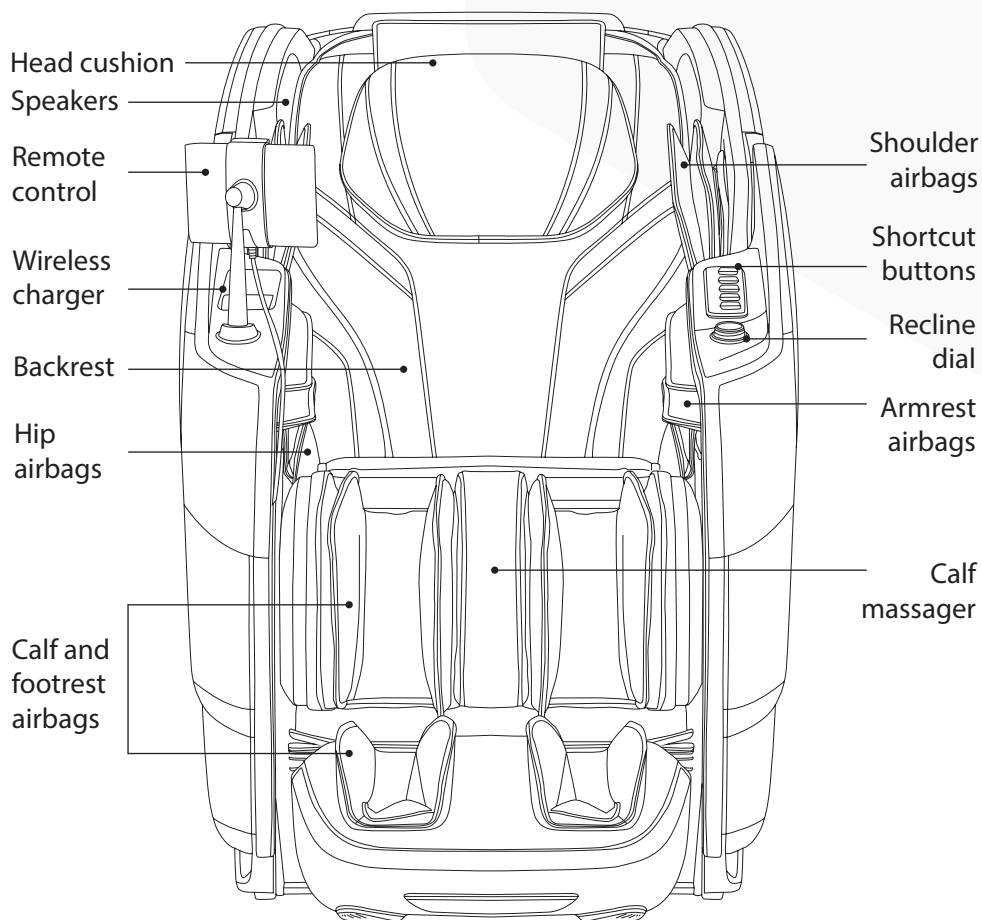

INSTALLATION & SETUP

INCLUDED COMPONENTS

Touchscreen Controller	Controller Bracket	Support Decorative Cover	Power Cable
			
x1	x1	x1	x1



M4 Allen Key	Flat Washer	M5 Internal Hexagon Screw	M5 Combined Bolt
			
x1	x4	x4	x3




scan QR code to view a video of these
assembly steps on [YouTube](#)

1. ARMREST INSTALLATION



1. After unpacking the chair and setting the packaging aside for responsible disposal or recycling, take the left-side armrest and lift it up near the main chair. Connect the air hose and electrical connections from the chair to the armrest (Figure 1). Using two people is recommended for this step.

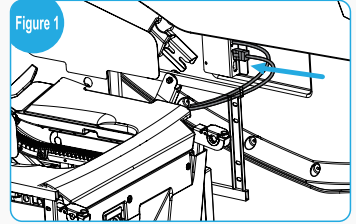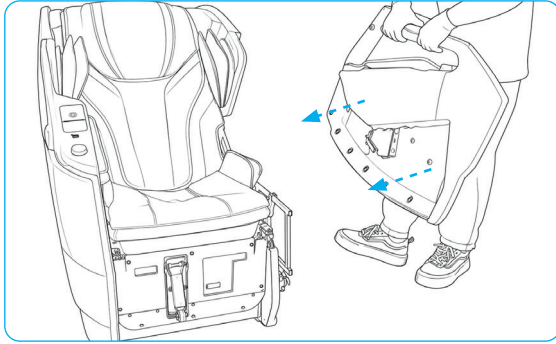



2. Near the top of the armrest is a locking pin - insert this into the port at the top of the chair side - near to the headrest end (Figure 2).

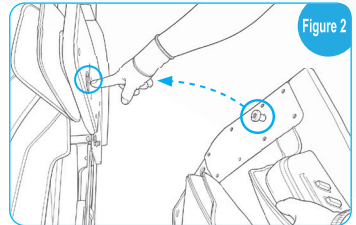

Once inserted, you can then lower the front of the armrest downward, ensuring that the metal brackets in the armrest fit over top of the steel tubing on the chair frame. From the front of the armrest, push up and back to lock into place.

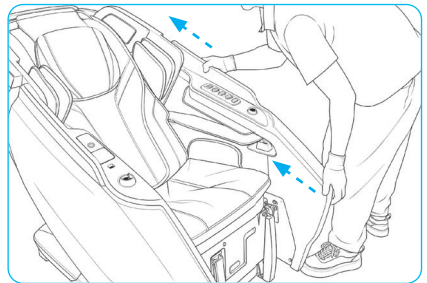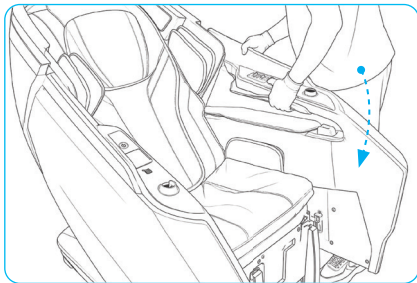


As a final step for armrest installation, you can now fix the armrest to the chair frame using two M5 combined bolts with washers at the front of the armrest and chair frame.

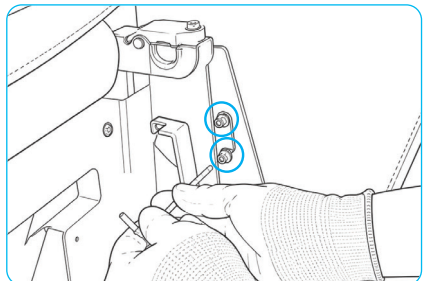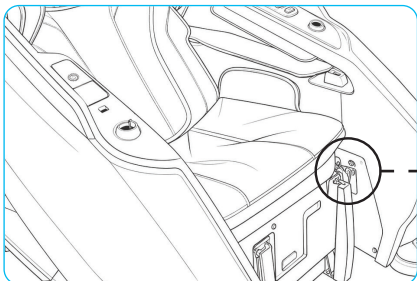


2. FOOTREST INSTALLATION

Note: the chair ships in a partially reclined state. Before beginning this step, plug the power cable into the bottom rear of the chair and plug into a wall outlet. Use the rotating dial on the armrest to bring the chair to an upright position, which will make the footrest installation steps easier.


1. Connect the cable and air hose of the legrest into the sockets at the front of the steel frame assembly (Figure 1).

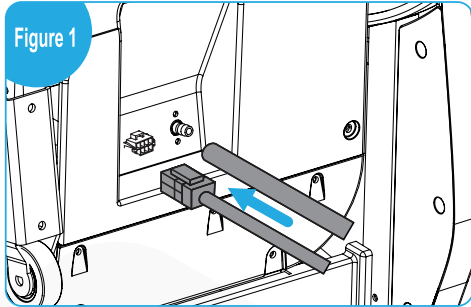


2. After the connection is completed, open the legrest fixing covers on both sides of the steel frame assembly (Figure 2).

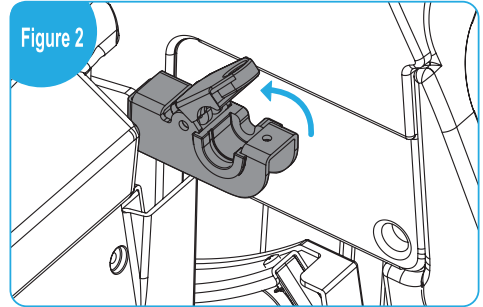

3. Lift the legrest and align the posts onto the slots, close/clamp the fixing cover and fix each in place with the an M4 screw (Figure 3).

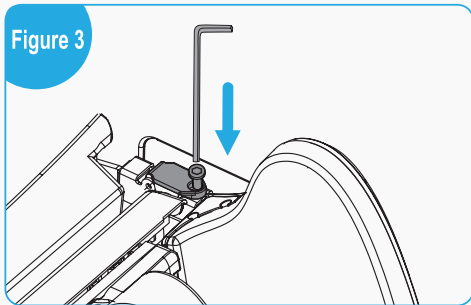

4. Connect up the zipper that connects the footrest fabric to the seat base fabric cushion.

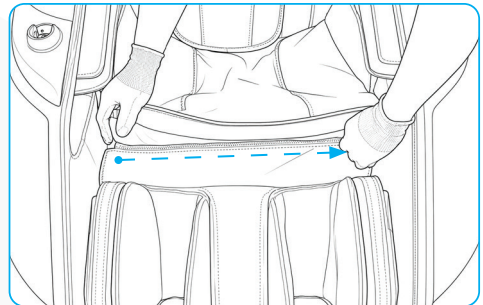

3. REMOTE CONTROL INSTALLATION

1. Align the remote control bracket with the hole at the front of the armrest. Insert into place and fix with an M5 screw (Figure 1 & 2).

Figure 1



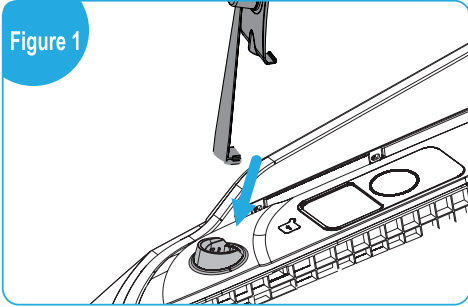


Figure 2

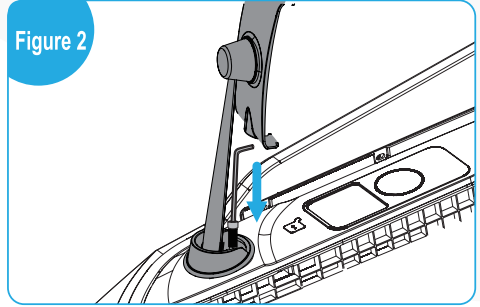


3. Place the plastic decorative cover over the gap, and gently press into place.


Figure 3

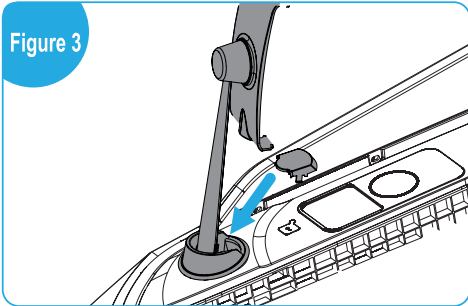

4. Connect the remote control cable to the plug located between the armrest and the seat and place the remote control into the control bracket.

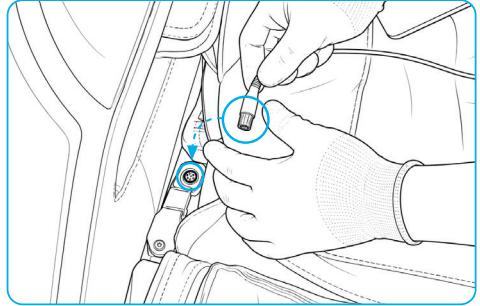

PLACING & MOVING THE CHAIR

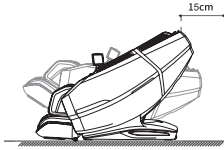


- Ensure there is at least 15cm between the upright massage chair and any walls or objects behind it to ensure the chair can recline freely.

- It is recommended to place the massage chair on a thin rug or mat to reduce chances of floor indentation over time.



- On delicate flooring areas, please lift the massage chair using two or more people to avoid floor damage.

- Otherwise, move the chair using the caster wheels at the rear of the seat base. Tilt the chair down and back by approximately 45 degrees and push to move.

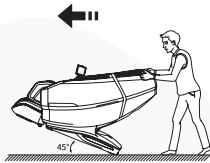


- Ensure the chair is powered off, free of people or objects on the seat, and will not travel over any gaps or cracks greater than 5mm or drops in the floor greater than 2mm before moving.

HEADREST & BACKREST CUSHIONS

- Using the headrest & backrest cushions can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (it is recommended to begin using the cushions and assess your comfort level before removing).


The backrest cushion is connected to the backrest by a zipper (1), and the headrest cushion is connected to the backrest cushion by another zipper (2).

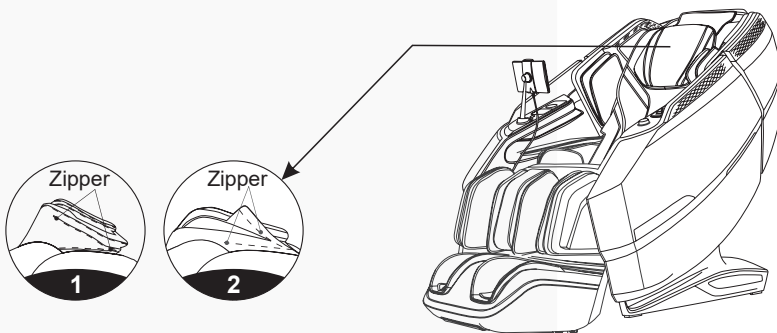



CHECK YOUR SURROUNDINGS

- Every time the massage chair is used ensure that there are no people, pets or objects around the unit.

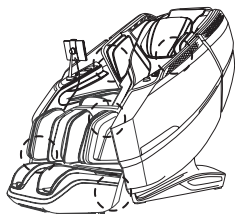


PRE-MASSAGE CHECKS


- Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
- Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
- Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

POWER ON


- Please check the power cord and plug for damage before use.
- It is strictly forbidden to use a power supply other than the power supply provided with this product.
- It is strictly forbidden to connect various power conversion devices without authorisation to supply power to this product.

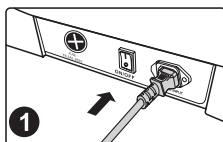

Plug in power cord

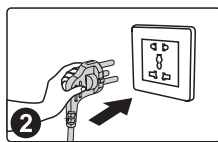

Schematic diagram of power on

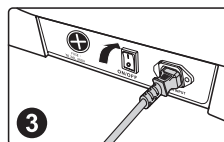

Turn on the power switch ("I" position)

QUICK START GUIDE

Remove your shoes and sit into the chair. It is recommended to use the massage chair without wearing jewellery or watches.

Press the power button on the right hand side of the remote control for 3 seconds, and allow the chair 10 seconds to power on.


First, the chair will ask you to select a general massage intensity between gentle, medium and strong.




If a massage level is not selected within 10 seconds, the chair will default to 'Soothing' and begin reclining to zero-gravity position. You can skip this step to leave the chair at its current recline angle by pressing the Skip button.



Next the chair will begin body shape detection to more accurately suit the position of your back and shoulders. You can also skip this step with the Skip button if desired. Skipping here will also skip the next stage (shoulder position fine tuning) and go straight to the home screen.

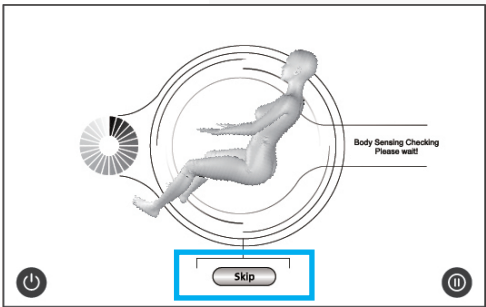


Lastly, you will be given the opportunity to fine tune the position of the backrest rollers according to shoulder height - if you believe auto detection did not find the right position. Use the arrow keys up and down to adjust to where your shoulders are, and press Confirm. If no input is made for 10 seconds, the chair will proceed to begin the massage.

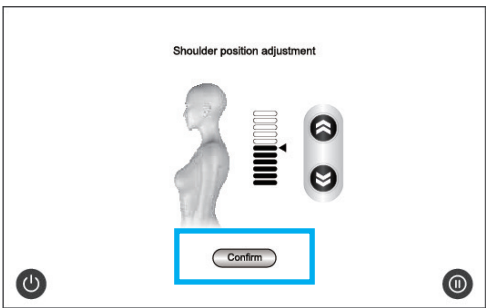


Once these steps have been completed, you will be taken to the Home Screen, which is detailed on the next page and beyond.

BASIC CONTROLS

Long press the power button on the right hand side of the remote control to power the chair on or off (button **09** below). After the shoulder position screen is complete, the remote will display the below Home Screen:

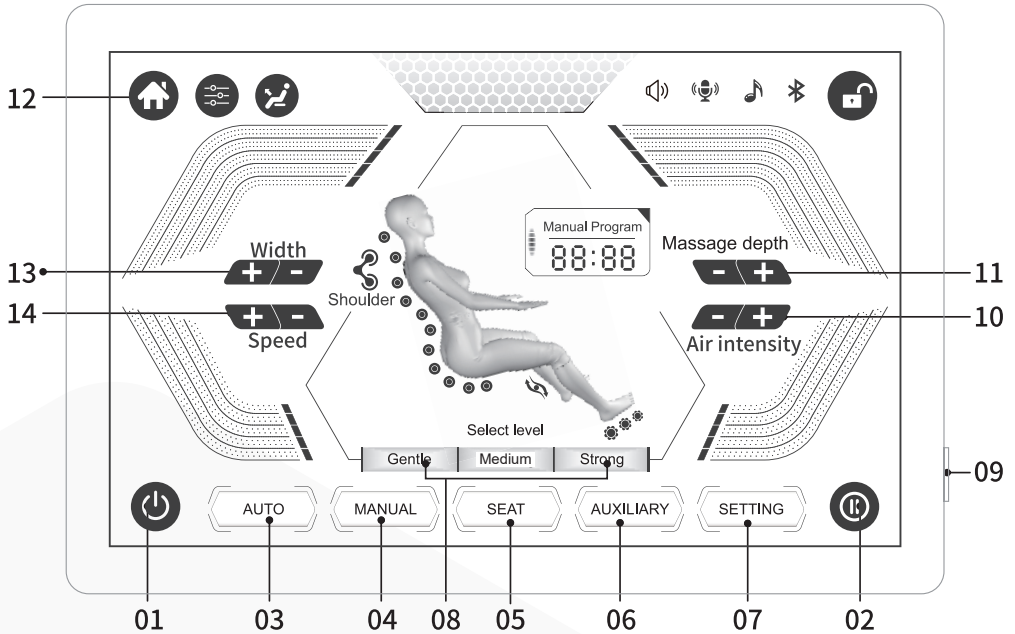


- | | | |
|----|-----------------------|---|
| 01 | On/Off | Enable or disable the massage functions |
| 02 | Pause | Pause or resume the massage functions |
| 03 | Auto Menu | Open the Automatic Modes menu |
| 04 | Manual Menu | Open the Manual Controls menu |
| 05 | Seat Menu | Open the Seat Adjustments menu |
| 06 | Auxiliary Menu | Open the Auxiliary Functions menu |
| 07 | Settings | Open the Settings menu |
| 08 | Intensity | Adjust the overall intensity of the massage functions |
| 09 | Chair On/Off | Turns the massage chair on and off |
| 10 | Air Intensity | Adjusts the strength of the airbags (1-5 lowest to strongest intensity) |
| 11 | Massage Depth | Adjusts the pressing depth of the upper backrest rollers |
| 12 | Home | Return to this home screen from any other screen or menu |
| 13 | Width | Adjust the width between the massage rollers |
| 14 | Speed | Adjust the operating speed of the massage rollers |

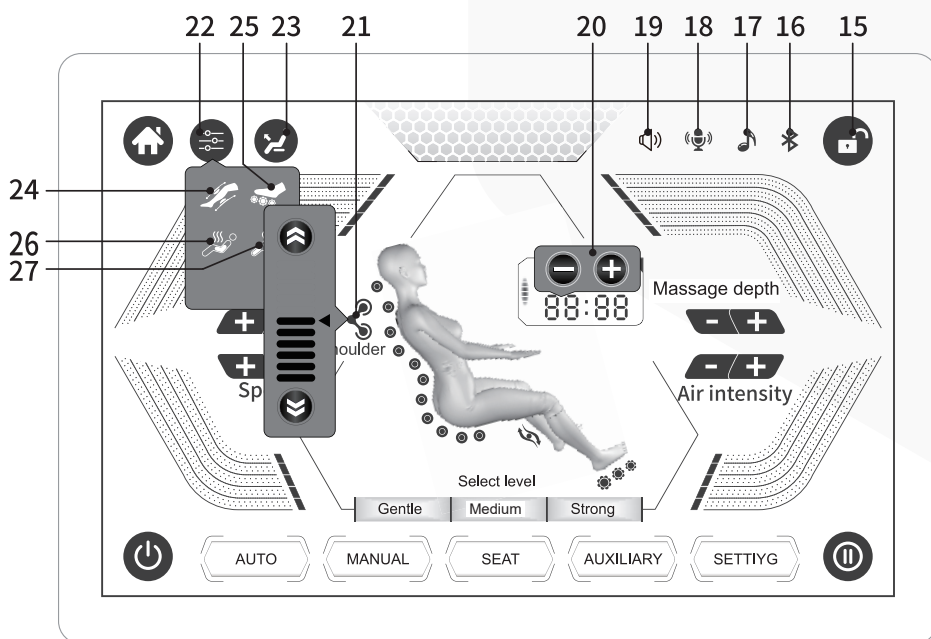


- | | | |
|----|----------------------------|---|
| 15 | Lock | Locks the touchscreen from accidental input |
| 16 | Bluetooth | Toggles Bluetooth function on and off |
| 17 | Background Music | Toggles background music on and off (certain auto modes only) |
| 18 | Voice Control | Toggles voice control on and off |
| 19 | Voice Broadcast | Readies the voice assistant for a command |
| 20 | Time Adjustment | Use the + and - keys to add or remove time to current massage |
| 21 | Shoulder Position | Use the up and down arrows to adjust upper massage rollers height |
| 22 | Auxiliary Functions | Use to quickly access 24, 25, 26 and 27 below |
| 23 | Reset | Reset the chair position back to upright |
| 24 | Calf Kneading | Turn the calfrest massage functions on or off |
| 25 | Foot Rollers | Adjust the foot rollers speed from 1 - 3, or off |
| 26 | Backrest Heating | Turn the backrest heating on or off |
| 27 | Calf Heating | Turn the calfrest heating on or off |

AUTOMATIC MODES

To get started with an automatic massage mode, press the **Auto** button from the Home Screen:

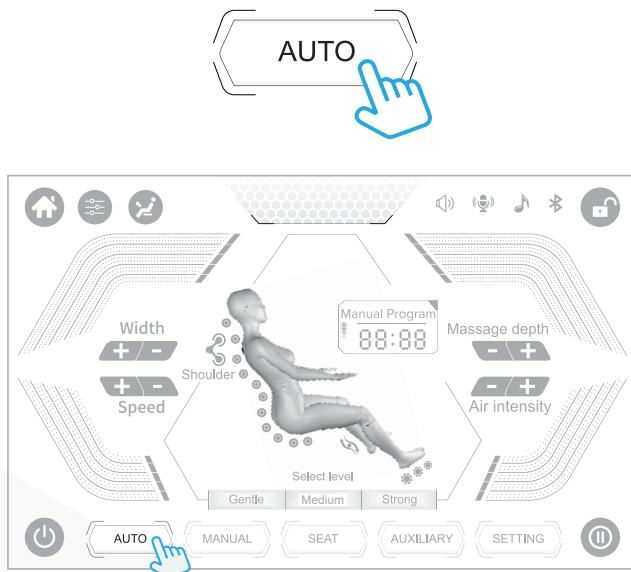

From the Auto Program menu there are 4 pages with five different modes to choose from on each. Simply press on the mode to begin, or press the Auto 1, Auto 2 etc pages at the top to browse through all of the available modes.

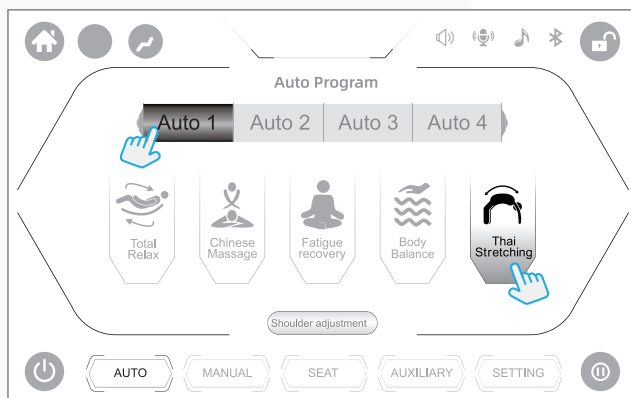


The different modes are detailed on the following page.

Note: modes 1 through 5 have automatic background music which can be turned off in the settings menu



Total Relax	A fully reclined relaxing massage (with background music)
Chinese Massage	A gentle massage with a focus on the lower back & waist (with background music)
Relieve Muscle	A more intense full body mode, recommended for athletes (with background music)
Body Balance	A gentle program that aims to relax and relieve stress (with background music)
Thai Massage	Strong intensity massage. This mode will hold the body in place while mimicking stretching type massage movements used in traditional Thai massage (with background music)
Full Body Stretch	Another strong intensity massage that clamps or holds the body in place while massaging
Neck & Shoulder Care	A gentle mode with a focus on the neck and shoulders, and applying pressure on the Jianjing (trapezius) acupoint
Hips & Legs Fit	This mode focuses on the hips, buttocks, waist and legs and pushes the glutes to lift the hips
Spinal Traction	A medium intensity massage that uses kneading, tapping and shiatsu roller techniques
Leg & Foot Relief	A gentle mode with a main focus on calves and feet, and secondarily the shoulders and waist
Superior Enjoyable	A gentle mode that mainly uses airbag massage, with some foot roller and calf focus
Executive	A moderate to strong intensity, deep pressure full body massage recommended for larger & stronger users
Body Shaping	A gentle mode that kneads and presses the shoulders, neck, waist and hips
Office Regimen	Moderate intensity mode aimed to relieve common trouble areas for sedentary and office based lifestyles (shoulders, neck and waist focus with deep pressure)
Health Recharge	A gentle to moderate intensity massage that is aimed at encouraging bloodflow stimulation
Energy Boost	A strong intensity massage with deep pressure for high-activity, high-stress athletes
Lunch Break	A gentle back and waist massage with pressure on the Shenyu (lower back) acupoint - can be used quickly as a refresher throughout the work day
Warming & Detox	A moderate intensity mode that focuses on the back and waist, and aims to encourage bloodflow with tapping and kneading movements
Sport Recovery	A moderate intensity mode that utilises many massage techniques, targeting the entire body for sports recovery
Sweet Dream	A gentle massage that pressures the Fengchi (neck) and Shenyu (lower back) acupoints to help encourage a better night's sleep - includes background music (can be turned off in settings)

SHOULDER ADJUSTMENT

To adjust the position of the upper massage rollers, you can press the **Shoulder Adjustment** button from the Auto Program menu.

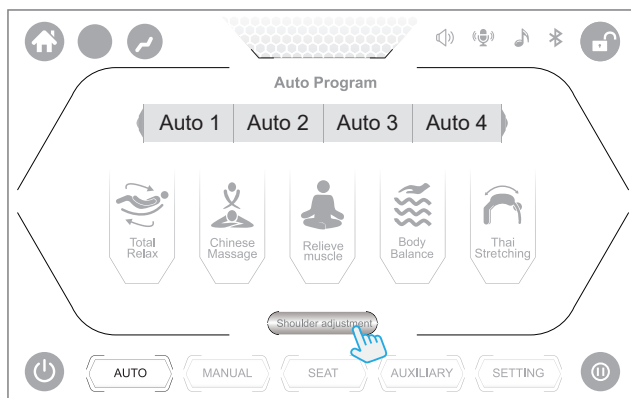


Use the up and down arrow buttons to fine tune the position of the upper massage rollers. Once satisfied, you can press the Home button to return.

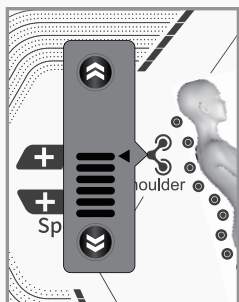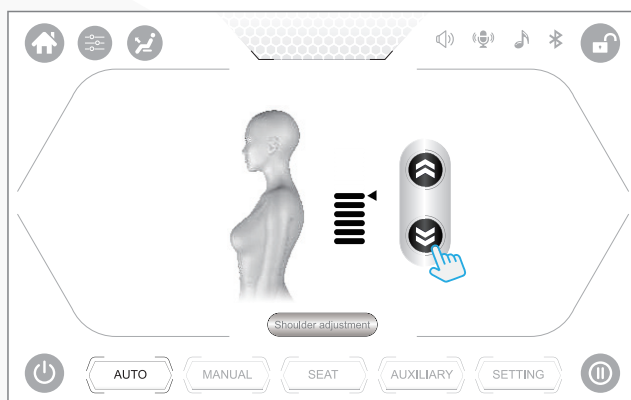

From the Home screen, you can also press the shoulder button and adjust the arrows from there as a quicker means of adjustment.

CHAIR POSITION CONTROLS

To adjust the chair's recline angle, footrest angle or footrest length, you can press the **Seat** button from the Home screen.

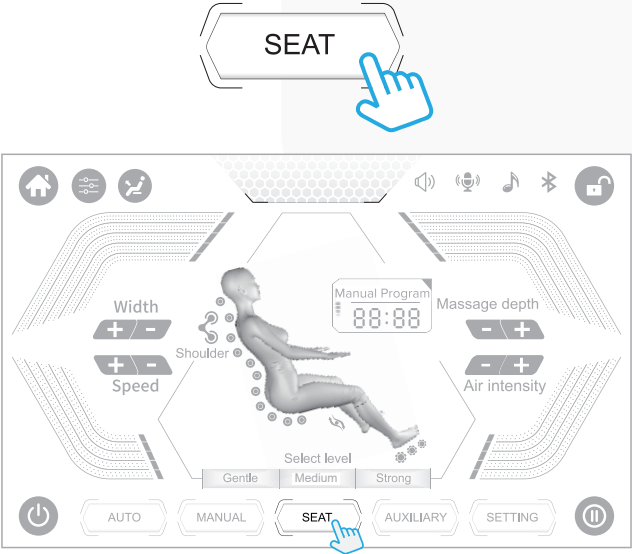

From the Seat adjustment menu, you can change the following chair position settings:

The **Legs** buttons raise and lower the footrest by itself

The **Feet** buttons extend or shorten the length of the footrest to suit user height

A screenshot of the 'SEAT' adjustment menu. The screen shows a reclining chair. On the left side, there are two sets of buttons: 'Legs' (up and down arrows) and 'Feet' (extend and shorten arrows). On the right side, there are three sets of buttons: 'Linkage' (up and down arrows), 'Backrest' (up and down arrows), and 'Zero' (three buttons labeled 'Zero', 'Zero', and 'Zero'). At the bottom of the screen are five buttons: 'AUTO', 'MANUAL', 'SEAT' (with a hand icon pointing to it), 'AUXILIARY', and 'SETTING'. The top of the screen has a row of icons: a home icon, a chair icon, a speaker icon, a microphone icon, a music note icon, a Bluetooth icon, and a lock icon.


The **Linkage** buttons adjust the recline angle of the backrest and footrest together

The **Backrest** buttons adjust the recline angle of the backrest by itself

The three **Zero** buttons toggle between three levels of Zero-Gravity Recline


AUXILIARY FUNCTIONS

Extra functions such as heating, foot roller control, health detection and memory save can all be managed from the **Auxiliary** menu.

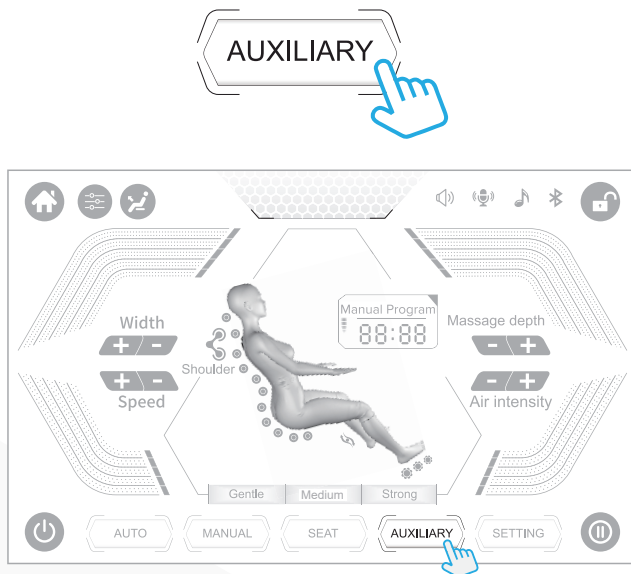

HEATING:

The first page of the Auxiliary menu will open to the Heat settings. Press the Waist or Legs button to turn heating on or off for that area:

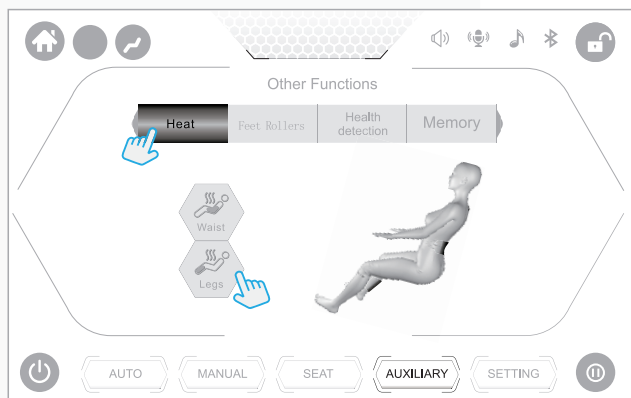


Allow 3 minutes to reach maximum temperature

FOOT ROLLER INTENSITY:


From the Auxiliary menu, press the Rollers button to change to the foot roller menu.

Press the Foot Rollers button to adjust the intensity of the foot roller massage between three levels or off. The current level is indicated by 3 circle roller icons beneath the foot in the diagram.

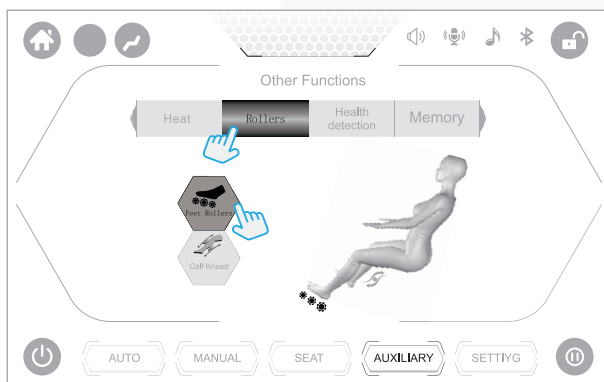


CALF KNEADING:

Press the Calf Knead button to turn calf kneading on or off (the centre section of the footrest between the users calves). The on/off status is indicated by a wavy arrow icon beneath the legs in the diagram.

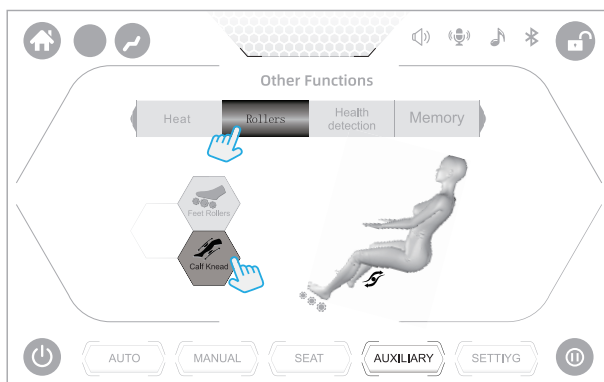


HEALTH DETECTION:

Press the Health detection button from the Auxiliary menu to start the health detection feature. Press the Start button, and then place index finger or middle finger on the sensor in the left-hand side armrest.

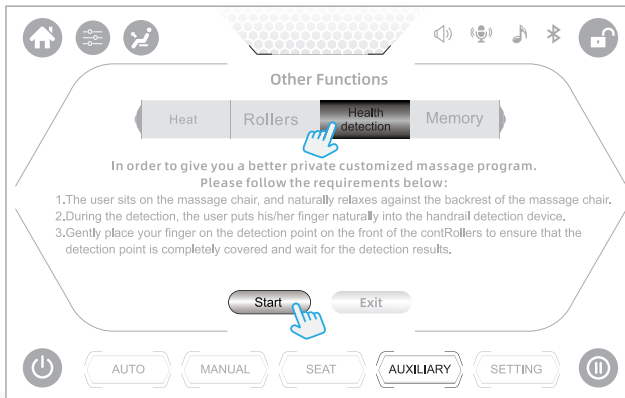


Wait a few seconds for the reading to complete, and you will be shown your Blood oxygen, Heart rate, Fatigue index and Microcirculation readings. The massage chair will also choose operating settings for you based on these readings - you can choose to use these settings with the yes and no buttons that will appear in place of the 'exit' button.

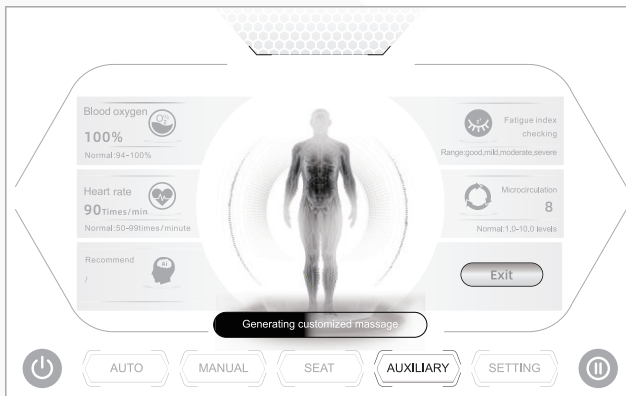

Note: the Health detection feature and resulting readings are not intended as a replacement for proper medical advice. Please consult with your health professional for any health or wellbeing concerns.

MEMORY SETTINGS:

The memory settings allow you to save up to 3 sets of your favourite massage settings to quickly load up and use again later. Press the Memory button from the Auxiliary menu to access the memory functionality.

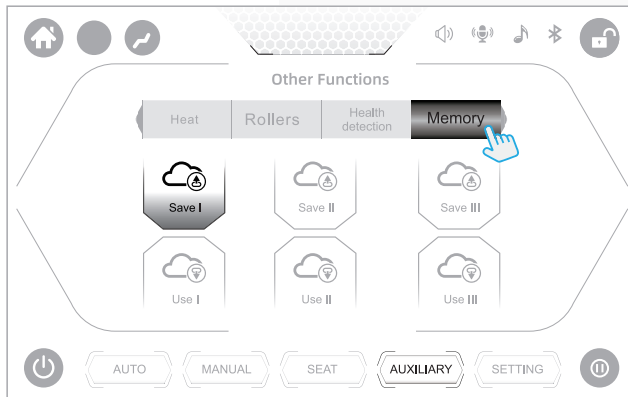


Press the Save I, II or III button to save the current massage settings to that memory slot.

Press the Use I, II or III button to load the saved settings from that slot.


MANUAL MODE

For finer control over the massage functions, you can use the **Manual** mode menu. Select it from the home screen to begin.

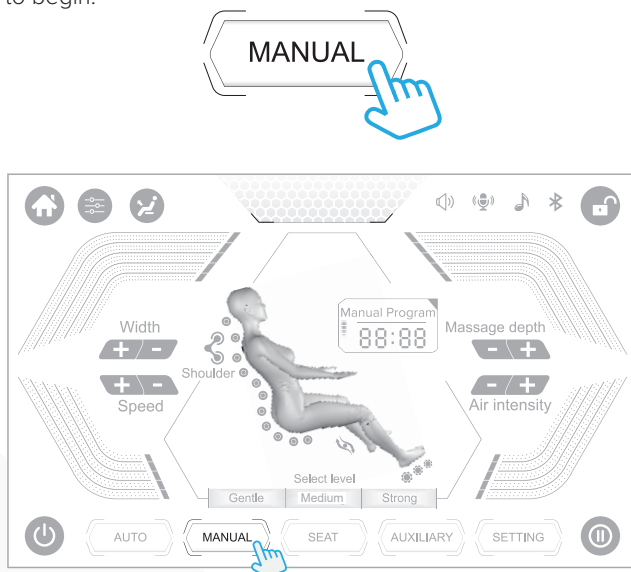

ROLLER TECHNIQUES:

The Orbit massage chair has two sets of massage rollers; the upper rollers which travel the shoulders and back, and the lower rollers which travel the glutes and hips. From the manual mode menu, you can change the rollers movement technique for the upper rollers under the M1 button, and for the lower rollers under the M2 button.

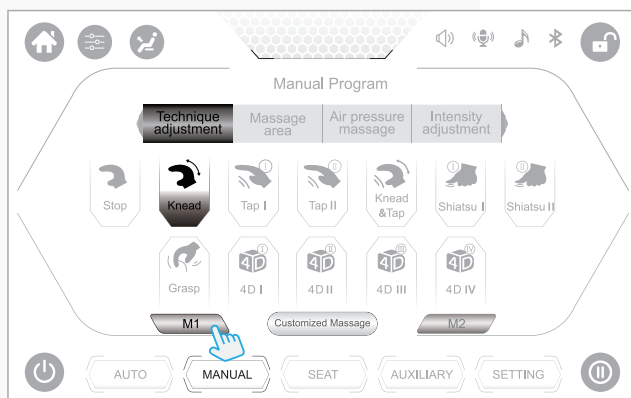

(continued next page)

For the upper rollers, there are eleven movement techniques to choose from - simply press the corresponding button for the desired action. The options are: Kneading, two modes of Tapping, Kneading with Tapping, two modes of Shiatsu, Grasp, and four modes of 4D (enhanced pressure depth) massage.

										
Knead	Tap I	Tap II	Knead & Tap	Shiatsu I	Shiatsu II	Grasp	4D I	4D II	4D III	4D IV

For the lower rollers, there are six movement techniques to choose from: Kneading, two modes of Tapping, Kneading with Tapping, and two modes of Shiatsu.

					
Knead	Tap I	Tap II	Knead & Tap	Shiatsu I	Shiatsu II

ROLLER SPEED AND WIDTH:


The speed or width of the massage rollers can be adjusted depending on which technique is currently selected, per the below table:

Technique		M1 (Upper)	M2 (Lower)
Knead		Speed only	Speed only
Tap I		Speed and width	Speed and width
Tap II		Speed and width	Speed and width
Knead & Tap		Speed only	Speed only
Shiatsu I		Width only	Speed and width
Shiatsu II		Width only	Speed and width
Grasp		Speed only	
4D I		Speed only	
4D II		Speed only	
4D III		Speed and width	
4D IV		Speed and width	

(continued next page)


To adjust the speed or width of the massage rollers, press the Home shortcut to go back to the Home screen.

From the Home screen, the speed and width are adjustable using the + and - buttons on the left side of the screen. The current level is indicated by the surrounding lines, and both are adjustable from 1 to 5 - one being the lowest speed or narrowest width, and five being the highest speed or furthest width.

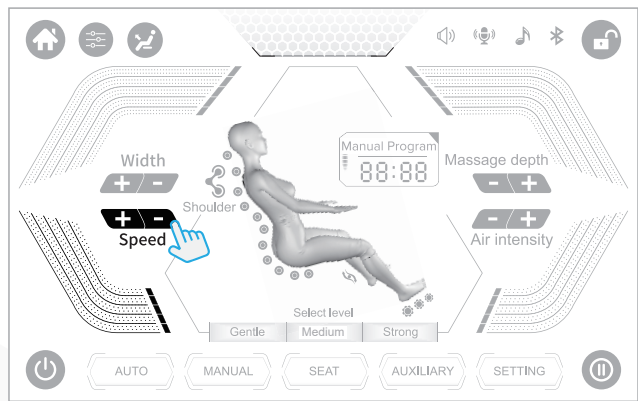

MASSAGE AREA:

To adjust the position and area of the massage rollers, enter the Massage Area screen from the Manual menu.

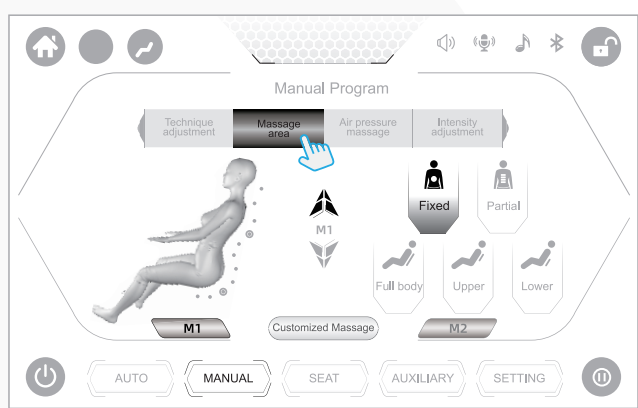

(continued next page)

The Massage Areas, like the Roller Techniques, are also managed by M1 for upper rollers and M2 for lower rollers. The options available on the upper rollers are:

Fixed		Upper rollers stay in place (fixed position)
Partial		Upper rollers travel up and down a small distance
Full Body		Upper rollers travel up and down the maximum distance
Upper		Upper rollers travel up and down the upper back only
Lower		Upper rollers travel up and down the lower back only


The options available on the lower rollers are:

Fixed		Lower rollers stay in place (fixed position)
-------	---	--

During Fixed and Partial massage areas, the exact position of the rollers can be adjusted using the  and  arrow keys in the center of the screen.


AIRBAG CONTROLS:

During manual operation, the intensity of the airbags can be adjust from the Air Pressure Massage menu.

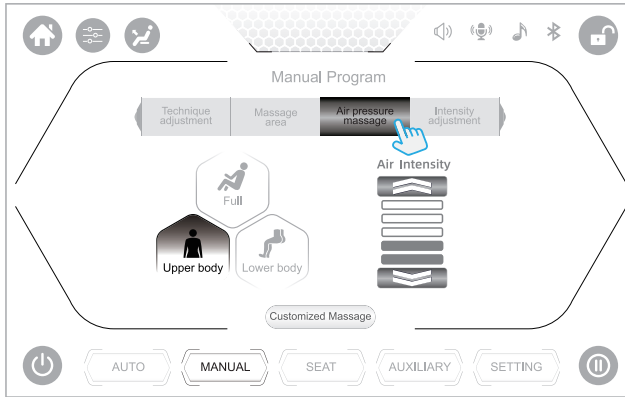

The airbags can be set to Full body (using the 'Full' button), or Upper body only (using the 'Upper body' button) or Lower body only (using the 'Lower body' button).

The airbag pressure intensity can be adjust using the up and down arrows on the right hand side, from 0 (off) up to 5 (strongest intensity).

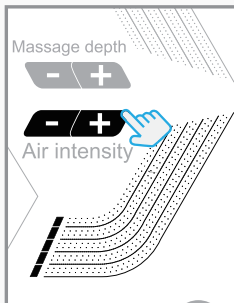


From the Home screen, you can also press the + and - buttons above 'Air Intensity' as a quicker means of adjusting the currently operating airbags.


The selected intensity (1 to 5) is indicated by the curved decorative lines below the + and - buttons.

ROLLER WIDTH & SPEED:

During manual operation, the upper roller width, speed and depth can be adjusted from the Intensity Adjustment menu.

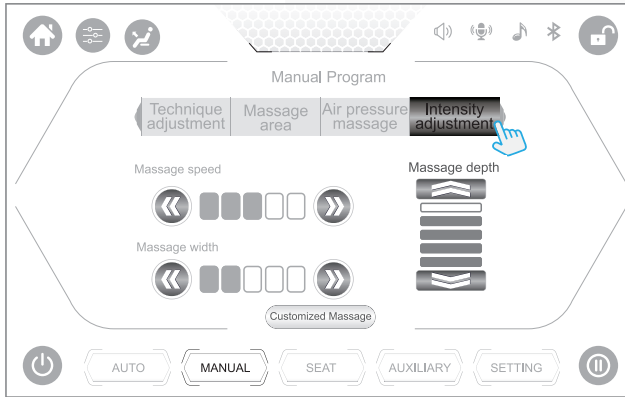


You can adjust the massage roller speed and width using the horizontal arrows, and the massage depth using the vertical arrows. All three of these settings are also from 1 to 5, with five being the fastest/widest/deepest setting. The setting here will be for the selected set of rollers under 'Message Area'; M1 for upper or M2 for lower rollers. M2 (lower) can only change speed and width, not intensity.

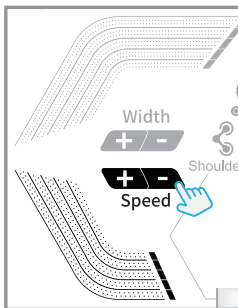

From the Home screen, you can also press the + and - buttons for Width and Speed as a quicker means of adjusting the rollers.


The selected intensity (1 to 5) is indicated by the curved decorative lines around the buttons.

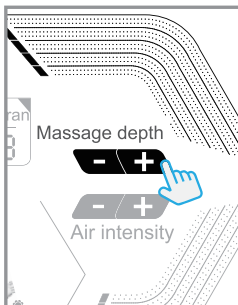


Similarly, on the right hand side of the Home screen, the Message Depth setting can be adjusted.

CUSTOMIZED MESSAGE:


Using the Customized Message button from the Manual menu, you can create two custom manual message programs from a more refined interface:

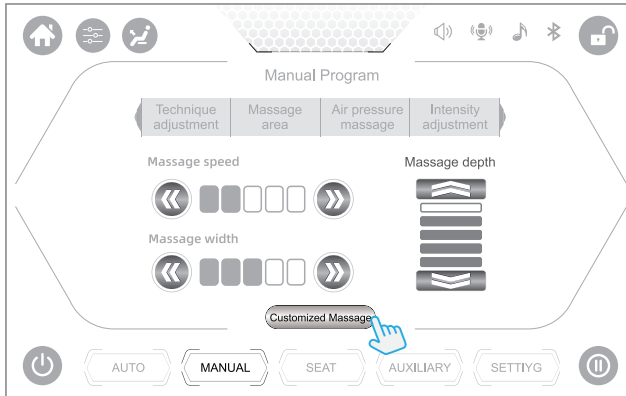

Click the “Custom Setting I” or “Custom Setting II” button to open the interface for programming message settings for that slot.

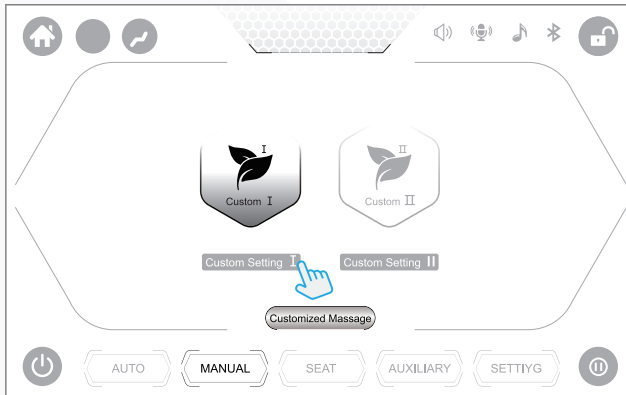


From the main page, you will have access to massage roller techniques. There are buttons at the bottom of the screen for modifying the Foot Roller, Calf Kneading, Massage Area and Airbags Area. Use these settings as outlined on previous pages to create your custom program.

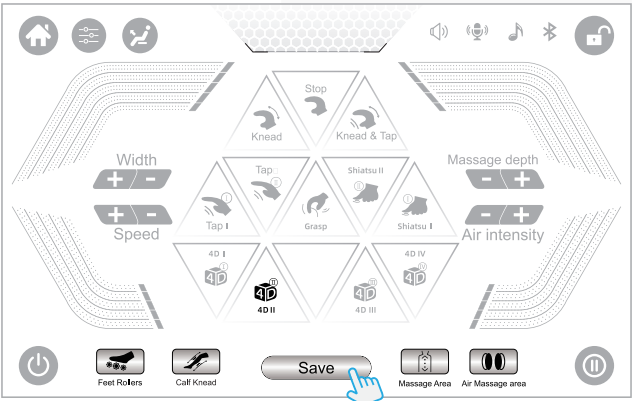

Remember to press Save when done.

To load and use Custom program I or II, press the main icon button for the corresponding program on the Customized Massage menu page:

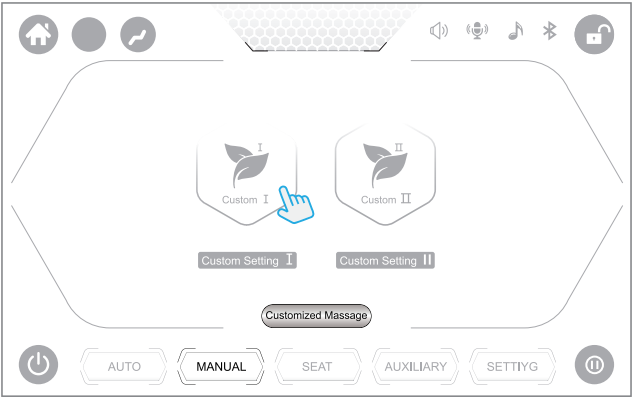

BLUETOOTH AUDIO

To play music or other audio through the Bluetooth speakers, ensure that Bluetooth audio is enabled on the chair (see Settings section for details).

Then, enter the Bluetooth settings menu on your phone or device.


Search for a new device, look for “SMART COMFORT 0000” or similar.

Select ‘connect’ or ‘pair’.

You can then play music using your regular media player app.


ARMREST CONTROL PANEL

The armrest control panels can be used for controlling massage features & functions without using the main remote control.

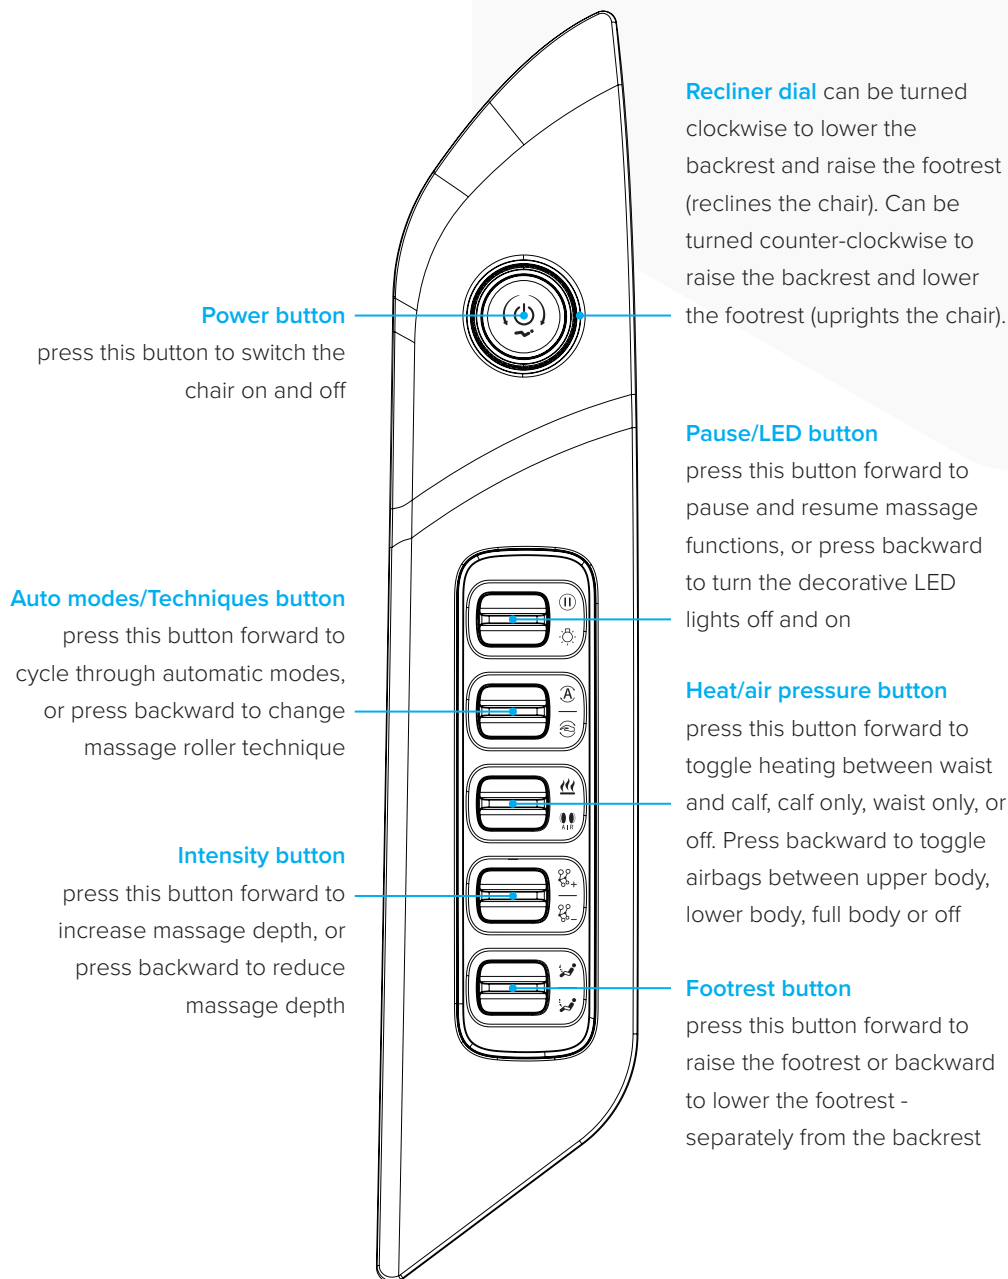

SETTINGS MENU

To adjust additional settings you can use the **Settings** menu button from the Home screen.

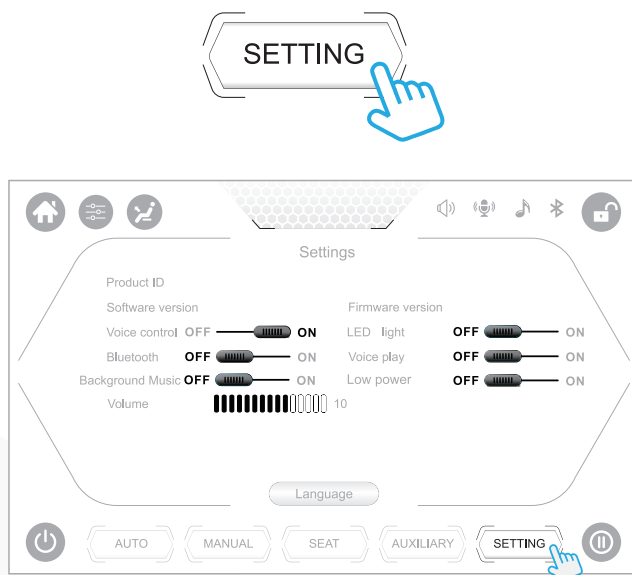

From here you can adjust the following options:

Voice control - allows the usage of voice commands for controlling the chair (see next section for details). On or off status is indicated by a microphone icon at the top right of the screen.

Bluetooth - allows the pairing of Bluetooth devices to play music through the speakers. On or off status is indicated by a Bluetooth icon at the top right of the screen.

Background Music - toggles the built-in background music for the first five automatic modes.

LED light - toggles the decorative LED lights off and on

Voice play - enables or disables voice feedback from chair when performing certain functions

Volume - use this slider to adjust the volume of audio from connected Bluetooth devices from 0 (quietest) to 15 (loudest).

Language - changes the on-screen display language between English, Chinese or German. (note this does not change the language for voice controls).

Low power - when on, the chairs functions are reduced at the end of a massage program to save power. Chair can only be powered back on by using the power button on the remote control (shortcut keys will not work).

VOICE CONTROL

To control the chair via Voice commands, say the phrase “Hi Alice” and wait for the chair to respond “I am here”. You can then give the following voice commands to activate the desired settings:

Say this:	To do this:
<i>“Hi Alice”</i>	Prompt the chair to listen for a voice command
<i>“Massage on”</i>	Start the massage
<i>“Massage off”</i>	Stop the massage
<i>“Total Relax”</i>	Change to Total relax automatic massage program
<i>“Energy Boost”</i>	Change to Energy Boost automatic massage program
<i>“Sweet Dream”</i>	Change to Sweet Dream automatic massage program
<i>“Neck & Shoulder Care”</i>	Change to Neck & Shoulder Care automatic program
<i>“Lunch Break”</i>	Change to Lunch break automatic program
<i>“Thai Massage”</i>	Change to Thai Massage automatic program
<i>“Airbags on”</i>	Turn airbags on
<i>“Airbags off”</i>	Turn airbags off
<i>“Seat position up”</i>	Recline the chair upwards slightly
<i>“Seat position down”</i>	Recline the chair backwards slightly
<i>“Change the mode”</i>	Change to from automatic mode to manual operation
<i>“Move up”</i>	Move back massage rollers down slightly (during Partial/Fixed point manual mode)
<i>“Move down”</i>	Move back massage rollers up slightly (during Partial/Fixed point manual mode)

Safety Precautions must be observed at all times

- Please read all relevant instructions carefully before use. The notes marked here will help you to use the product safely and correctly.

The following populations should not use this product:

- Persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised by those responsible for their safety.
- Persons with implantable medical devices such as pacemakers.
- Pregnant, unwell, or those with pre-existing medical condition(s).

If you are unsure of your suitability for using this device, please consult with your medical professional before use.

IMPORTANT SAFETY WARNINGS:

- Keep children away from the movable parts of this product.
- Do not drop or push anything into any slot or gap of the machine.
- Do not press or put your hands into the cloth cover of the massage rollers.
- Please empty your pockets before operating this machine.
- Do not carry fragile or combustible material in your pockets such as mobile phones, lighters or e-cigarettes/vapes.
- Use a well-grounded power supply unit suitable for this product.
- Pull out the plug after use or before cleaning to avoid any damage to physical injury or the product.
- Operate this product as instructed in this manual.
- Do not use any parts or accessories which are not recommended.
- Do not use this product outdoors.
- Do not use near open flames such as stoves, and do not smoke while using.
- Do not use heating equipment such as electric blankets on this product.
- Do not sit on the back of the chair, leg massagers, shoulders, armrests, or stand on the seat.
- Please read the Operation Instructions carefully before operation.
- Never use this product for any other purpose not listed in the manual.
- 20 minutes of usage each time is recommended.
- Do not use this product if the cover or leather is broken or damaged.
- Do not drop anything into this product.
- Never fall asleep while using this product.
- Do not use this product within one hour after a meal.
- Do not use this product with excessive force to avoid any injury.
- Do not use for purposes other than massage.
- If the power cord or any other part is damaged, it must be replaced by a professional authorized by the retailer or manufacturer, their maintenance department or similar department
- Please stop immediately and consult your doctor if you feel unwell when using this machine

Operating Environments:

- Do not use or store this product in a damp environment such as the bathroom.
- Stop using this product immediately if the device temperature changes sharply.
- Do not use this product in any heavily-dusty or caustic environment.
- Do not use this product in a small space or a place without good ventilation.

Storage Conditions:

- Storage room temperature: 5 °C to 40 °C.
- Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Product Service & Maintenance:

- This product should be maintained by the service center or service person designated by the original retailer or manufacturer only. No user should attempt to disassemble or maintain it without permission.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame.
- Avoid prolonged exposure to direct sunshine.
- Please clean this product with a dry cloth only. Never use thinner, benzene or alcohol.
- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.

Other Precautions:

- Check whether voltage is consistent with the specification of this product.
- Do not let water contact or flow into this product to avoid electric shock & damage.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.
- Stop using this product at once if it is operating abnormally, and consult your original retailer.

BASIC TROUBLESHOOTING


- Check all assembly steps are complete. Double-check connections are firm and secure.
- Turn the chair off at the wall outlet for 10 minutes to reset all electrical components.
- If there is no power to the chair, check if your chair has a fuse in the back panel. Follow the steps in the video for checking your fuse and replacing if required.




Scan the QR Code to view a video of replacing massage chair fuse (opens Youtube link)

- Check for error codes on the remote control:
Select the Settings menu. Continuously tap the text ID code until a beep is heard. Return to the home screen using the home icon. An error code will be displayed in the green area if there is a fault. Quote this error code to Customer Service when reporting the fault.





ORBIT MASSAGE CHAIR

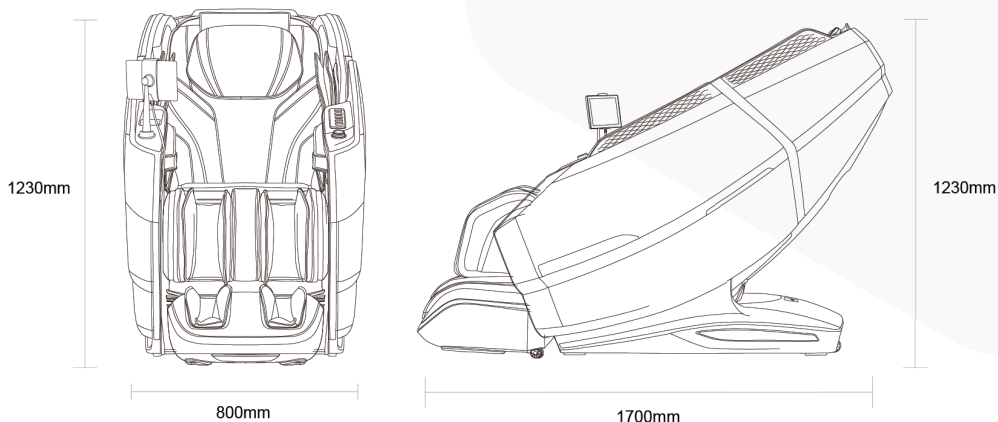

Keep at least 300mm of clear space between the chair backrest and nearby walls or furniture to ensure there is no contact with any items when chair is fully reclined.

Health and Safety Warnings: Do not drop or push anything into any slot of the machine. Please stop immediately and consult your doctor if you feel unwell when using this machine. Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised.

Do not use if you are pregnant, unwell, or have a pre-existing medical condition.

Do not sit on the back, armrest, or the leg rest as it may result in damage or injury.

Do not press or put your hands into the cloth cover of the massage hands.

Children should be supervised to ensure that they do not play with the product.

Smart Comfort Limited
customer@smartcomfort.com
483 Green Lanes
London
N13 4BS
United Kingdom

Model: Orbit

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz/60Hz ☐

Rated power: 210W

Rated time: 20min

Safety structure: Class I

